



Type of controller:

Desmon Gold:

Password = "11"

How to enter into the set up:

1. hold the button "Set" for 6 seconds;
2. on the display appears "PA1";
3. push the button Set and scroll with the button "UP" till to number "11";
4. push the button "Set" per entrare nei parametri.

Eliwell ID974:

Password = "11"

How to enter into the set up:

1. hold the button "Set" for 6 seconds;
2. on the display appears "PA1";
3. push the button Set and scroll with the button "UP" till to number "11";
4. push the button "Set" per entrare nei parametri.

Dixell XR60C:

Password = "Assente"

How to enter into the set up:

1. Hold contemporarily pushed the buttons "SET" e button "DOWN" for 6 seconds.

Dixell XW260L:

Password = "321"

How to enter into the set up:

1. Hold contemporarily pushed the buttons "SET" e button "DOWN" for 6 seconds;
2. Scroll in the menu with arrow buttons and select Pr2;
3. push "SET" and enter the password "321";
4. Push "SET" to enter into the set up.

Eliwell ID961:

Password = "11"

How to enter into the set up:

1. hold the button "Set" for 6 seconds;
2. on the display appears "PA1";
3. push the button Set and scroll with the button "UP" till to number "11";
4. push the button "Set" per entrare nei parametri

Dixell XR20C:

Password = "Assente"

How to enter into the set up:

1. Hold contemporarily pushed the buttons "SET" e button "DOWN" for 6 seconds.