



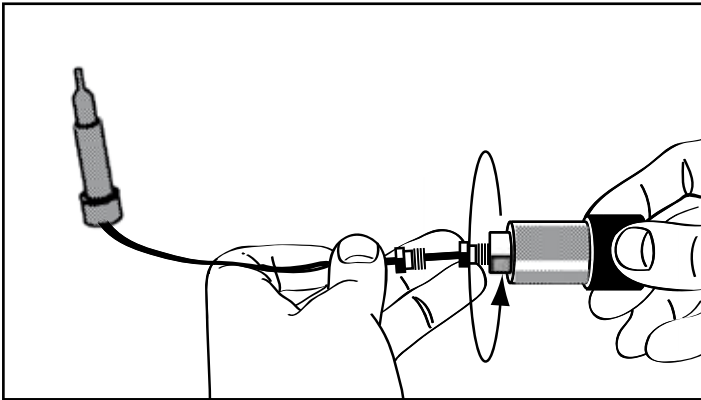


Thermoelement in den Thermoelement-Tester einschrauben.

Screw the thermocouple into the tester.

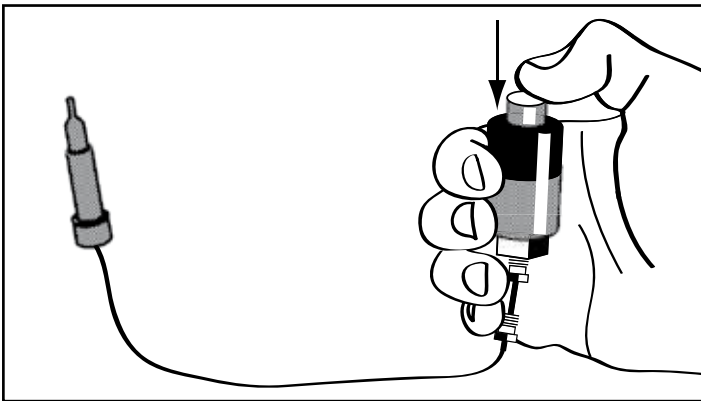


Thermoelement-Tester Knopf drücken.

Press the head of the tester

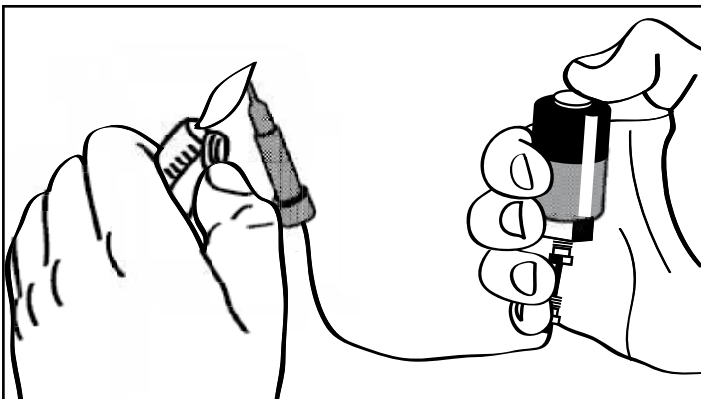

Knopf gedrückt halten.
Erhitzen der Thermoelementspitze.
Knopf loslassen.

Keep the head pressed down.
Heat the tip of the thermocouple.
Release the head of the tester.

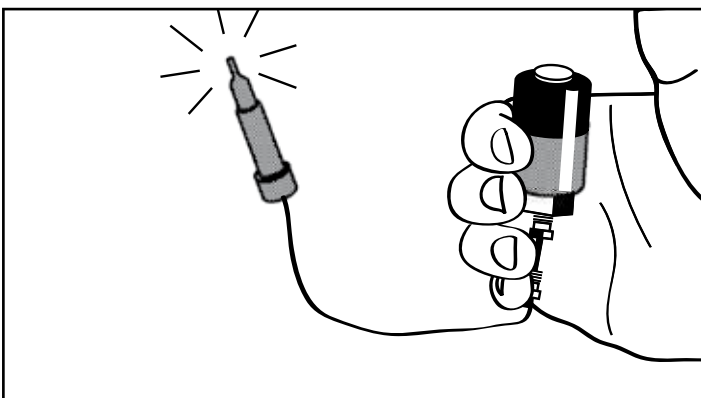

Knopfposition bleibt unten = Thermoelement einwandfrei
Knopfposition springt nach oben = Thermoelement defekt

Thermocouple head stays down = thermocouple works
Thermocouple head springs back up = thermocouple is defective