

COMMERCIAL REFRIGERANT

JS-320

RECOVERY SYSTEM

OPERATION MANUAL

TO BE OPERATED

BY QUALIFIED

PERSONNEL

ONLY!



TABLE OF CONTENTS

INTRODUCTION	2
SPECIFICATIONS	3
GENERAL SAFETY INSTRUCTIONS	4
DIRECT LIQUID OR VAPOR RECOVERY	5
LIQUID PUSH-PULL RECOVERY	6
ROUTINE MAINTENANCE	7

INTRODUCTION

Thank you for purchasing the JS-320 series unit.

The JS-320 is designed for servicing commercial and residential refrigeration systems. Simply follow the quick start guide and turn it on.

No need to watch for liquid refrigerant, this unit automatically handles it. Once the recovery is complete, simply turn the center valve to the SELF-CLEARING position. Now the unit is ready for the next type of refrigerant. The JS-320 series utilizes a 1/2hp (0.37kw) oil-less compressor. non-restrictive diaphragm manifold valves, and a liquid regulating valve to make it the first truly direct liquid or vapor refrigerant recovery unit.

The following are additional features:

•“On the Run”SELF-CLEARING valve.No need to turn off the unit when switching from recovery to self-clearing.

On board SUCTION and DISCHARGE gauges.

0 to 55 bar(800-psig)discharge gauge to handle R-410A.

Small physical size.

Integrated easy to use carrying handle.

High Pressure manual reset button set at 35 bar.

Easy and secure filter accesses.No dangling filters to be damaged.

Replaceable or cleanable filter cartridge.

Heavy-duty powder coated iron chassis surrounded by a tough High-Density nylon case.

Maintenance free Oil-less compressor

To help you get a good start,please continue to carefully read the balance of this manual.This manual contains important information on the proper procedures for operating this equipment.Please pay close attention to the safety information,

WARNING and **CAUTIONS** provided throughout this manual.Always remember “**SAFETY FIRST**”.

High Pressure Manual Reset Button

Discharge Gauge and Valve

Suction Gauge and Valve

SUCTION Port w/Filter

SELF-CLEARING Valve

DISCHARGE Port

Thermal Circuit Breaker

POWER Switch

Fan

IEC 320 Electrical Inlet



SPECIFICATIONS

Compressor Type	1/2HP Oil-less Reciprocating Compressor
Dimensions	21cm wide×45cm long×34cm high
Weight	17kg
Operating Range	0°C(32°F)to 49°C(120°F)
Power Source	220/240VAC50/60Hz 1Ph
Power Consumption	370W
Suction Pressure Gauge	-1to35bar
Discharge Pressure Gauge	0to55bar
Filtration	cleanable 100-mesh screen integrated into Suction Port
Shut-off Valves	Suction piston type and Discharge diaphragm type manifold valves
Overload Protection	3A thermal circuit breaker
High Pressure Shut-off	35bar508psig
Refrigerants	R-12,R-134a,R-401C,R-500,R-401A,R-409A,R-401B, R-407D,R-22,R-502,R-407C,R-402B,R408A,R-509, R-407A,R-404A,R-402A,R-507,R-407B,R-410A
Control System	Dependable electro-mechanical interlock system
Flow rate	
Direct Vapor	Up to 18kg/h
Direct Liquid	Up to 60kg/h
Push-Pull Liquid	Up to 265kg/h

GENERAL SAFETY INSTRUCTIONS

ONLY QUALIFIED SERVICE PERSONNEL SHOULD OPERATE THIS UNIT.

MOST STATES, COUNTRIES, ETC... MAY REQUIRE THE USER TO BE LICENSED.

PLEASE CHECK WITH YOUR LOCAL GOVERNMENT AGENCY.

DANGER-the recovery tank contains liquid refrigerant.Overfilling of the recovery tank may cause a violent explosion resulting in severe injury or even death.**As a minimum use a scale to continuously monitor the recovery tank weight.**

DANGER-Avoid breathing refrigerant vapors and lubricant vapor or mist. Breathing high concentration levels may cause heartarrhythmia, loss of consciousness,or even cause suffocation.

DANGER-ELECTRICAL SHOCK HAZARD-Always disconnect power source when servicing this equipment.

CAUTION-all hoses may contain liquid refrigerant under pressure.Contact with refrigerant may cause frostbite or other related injuries.Wear proper personal protective equipment such as safety goggles and gloves.When disconnecting any hose,please use extreme caution.


CAUTION-avoid breathing refrigerant vapors and/or lubricant mist.Exposure may irritate eyes,nose,throat,and skin.Please read the manufacturers Material Safety Data Sheet for further safety information on refrigerants and lubricants.

CAUTION-to reduce the risk of fire,avoid the use of extension cords thinner than NO.14awg. (1.5mm²) to prevent the overheating of this cord please keep length to a minimum.

CAUTION-do not use this equipment in the vicinity of spilled or open containers of gasoline or other flammable substances.Make certain that all safety devices are functioning properly before operating the equipment.

This equipment is intended for use of one refrigerant at a time until the SELF-CLEARING feature is used.Mixing of different refrigerants will cause your recovered supply of refrigerant to become contaminated.NOTE: It is very expensive to destroy mixed or damaged refrigerants.

DIRECT VAPOR OR LIQUID RECOVERY OPERATION

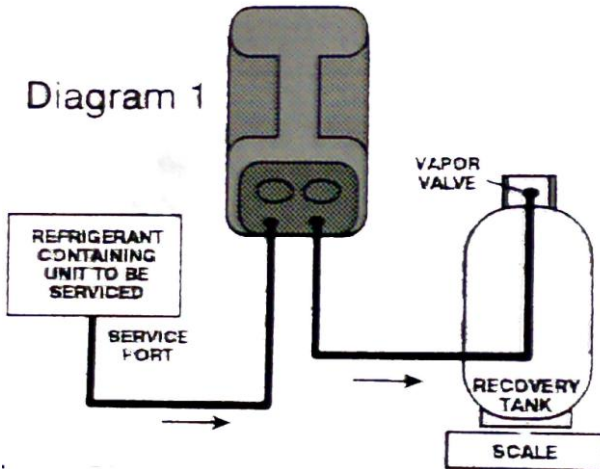

1. Connect the unit as shown in Diagram 1.

Note:The recovery tank must be rated for 38 bar.

2. Open the vapor valve on the Recovery Tank.

3. Open DISCHARGE valve on JS-320.

4. Rotate the center valve to the “RECOVERY” position.

5. Push the Main Power Switch “ON”.

Note:If the unit fails to start, open the suction valve and rotate the center valve to the “SELF-CLEARING” position for 5-10 seconds. Then rotate back to the “RECOVERY” position. Reset circuit breaker. Push the START switch.


6. Once unit has started, open the SUCTION valve on the JS-320 to start the refrigerant flow.

7. Monitor the suction gauge until it falls below the required vacuum level. Close the SUCTION valve.

8. Rotate the center valve to the SELF-CLEARING position. Again monitor suction gauge. Once the gauge reads a vacuum, turn unit off.

RECOVERY AND SELF-CLEARING ARE COMPLETE.

PUSH-PULL LIQUID RECOVERY OPERATION

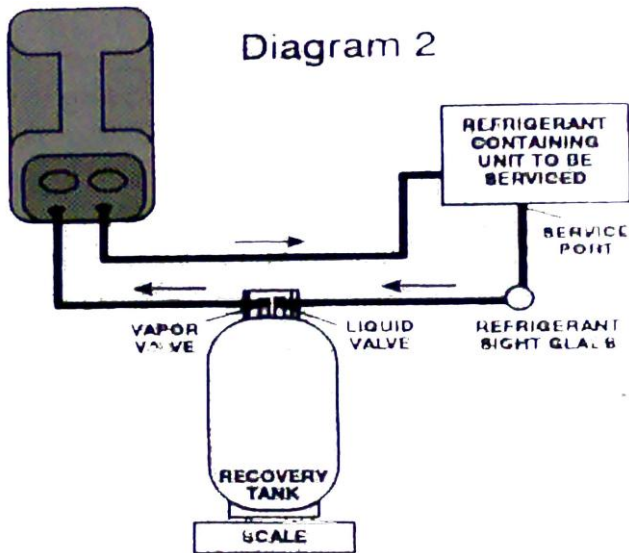

1. Connect the unit as shown in Diagram 2.

Note: The recovery tank must be rated for 38 bar.

2. Open both valves on the Recovery Tank.

3. Open DISCHARGE valve on JS-320.

4. Rotate the center valve to the "SELF-CLEARING" position.

5. Push the Main Power Switch "ON" .

Note: If the unit fails to start, open the suction valve and rotate the center valve to the "SELF-CLEARING" position for 5-10 seconds. Then rotate back to the "RECOVERY" position. Reset circuit breaker. Push the START switch.

6. Once unit has started, open the SUCTION valve on the JS-320 to start the refrigerant flow.

7. Monitor the optional inline sight glass for liquid refrigerant movement.

8. Once liquid refrigerant is no longer present, close SUCTION valve. When the SUCTION gauge falls into vacuum, proceed to Direct Vapor Recovery Operation.

ROUTONE MAINTENANCE

FILTER MAINTENANCE-the JS-320 is equipped with a 100 mesh screen filter. This filter should be checked periodically. A partially clogged filter will slow down the recovery rate of this unit.

Replace the filter cartridge as follows:

1. Use a 7/8" socket or boxed end wrench to loosen the suction port as shown in Figure 3.
2. Once loose, remove the suction port-filter cartridge assembly as shown in Figure 4.
3. Either clean the current cartridge or replace with new cartridge.
4. Inspect O-ring. Re-lubricate with compressor oil or equivalent.
5. Place filter back into suction port fitting.
6. Hand tighten this assembly back onto the JS-320.
7. Use a 7/8" socket or boxed end wrench to tighten 1/8 of a turn. Do not over tighten, damage to the O-ring may occur.
8. Check the connection for leaks.

