

eliwell

ID*PLUS*

902/961/971/974



EN

Electronic controllers for refrigeration units

CONTENTS

EN

IDPLUS 902/961 USER INTERFACE (KEYS AND LEDS).....	4
IDPLUS 971/974 USER INTERFACE (KEYS AND LEDS).....	6
IDPLUS 902/961 CONNECTIONS.....	8
IDPLUS 902/961 APPLICATIONS	9
IDPLUS 971 CONNECTIONS.....	10
IDPLUS 971 APPLICATIONS.....	11
IDPLUS 974 CONNECTIONS	12
IDPLUS 974 APPLICATIONS.....	13
LOADING DEFAULT APPLICATIONS	14
SETPOINT MODIFICATION LOCK.....	14
INSTRUMENT ON/OFF	14
ACCESSING AND USING THE MENUS.....	14
MANUAL DEFROST CYCLE ACTIVATION.....	15
MECHANICAL INSTALLATION - DIMENSIONS	15
TROUBLESHOOTING.....	15
ALARMS.....	16
PASSWORDS	18
USING THE COPYCARD	18
MACHINE STATUS MENU	19
PROGRAMMING MENU.....	19
MAX/MIN TEMPERATURE ALARMS.....	20
LIABILITY AND RESIDUAL RISKS	20
DISCLAIMER.....	21
ELECTRICAL CONNECTIONS.....	21
CONDITIONS OF USE	21
TECHNICAL DATA (EN 60730-2-9).....	22

FURTHER INFORMATION (INPUT, OUTPUT AND MECHANICAL FEATURES - APPLICABLE REGULATIONS)	22
DESCRIPTION OF IDPLUS 902/961 FAMILY	24
TABLE OF USER MENU PARAMETERS (IDPLUS 902/961).....	25
TABLE OF INSTALLER MENU PARAMETERS (IDPLUS 902/961)	26
DESCRIPTION OF IDPLUS 971 FAMILY	30
TABLE OF USER MENU PARAMETERS (IDPLUS 971).....	31
TABLE OF INSTALLER MENU PARAMETERS (IDPLUS 971).....	32
DESCRIPTION OF IDPLUS 974 FAMILY	37
TABLE OF USER MENU PARAMETERS (IDPLUS 974).....	38
TABLE OF INSTALLER MENU PARAMETERS (IDPLUS 974).....	39

IDPlus 902/961 USER INTERFACE



ID*PLUS* 902/961

KEYS



UP

Press and release
Scroll menu items
Increases values
Press for at least 5 sec
Activates the Manual Defrost function



STANDBY (ESC)

Press and release
Returns to the previous menu level
Confirms parameter value
Press for at least 5 sec
Activates the Standby function
(when outside the menus)



DOWN

Press and release
Scroll menu items
Decrease values
Press for at least 5 sec
Function can be configured by the user
(par. H32)



SET (ENTER)

Press and release
Displays alarms (if active)
Opens Machine Status menu
Press for at least 5 sec
Opens Programming menu
Confirm commands

LEDs

 Reduced SET / Economy LED Flashing: economy Setpoint active Quick flashing: access to level2 parameters Off: otherwise	 Alarm LED Permanently on: alarm active Flashing: alarm acknowledged Off: otherwise
 Compressor LED Permanently on: compressor active Flashing: a delay, a protection or a locked start-up Off: otherwise	 Defrost LED Permanently on: defrost active Flashing: manual or D.I. activation Off: otherwise
1 HEAT status LED Permanently on: compressor in HEAT Off: otherwise	2 NOT USED
°C °C LED Permanently on: °C setting (dro = 0) Off: otherwise	°F °F LED Permanently on: °F setting (dro = 1) Off: otherwise
* To activate the LOC function: - enter the "Basic Commands" menu by pressing the key set. - press keys ① and ⏏ within 2 seconds. If the LOC function is Active and you try to enter the "Programming" menu, the text LOC appears. If this happens, the parameters are still displayed but cannot be edited. To disable the keypad lock, repeat the aforementioned procedure. * When switched on, the device performs a Lamp Test; the display and LEDs will flash for several seconds to check that they all function correctly.	

IDPlus 971/974 USER INTERFACE



ID**PLUS** 971/974

KEYS



UP

Press and release
Scroll menu items
Increases values
Press for at least 5 sec
Activates the Manual Defrost function



Standby (ESC)

Press and release
Returns to the previous menu level
Confirms parameter value
Press for at least 5 sec
Activates the Standby function
(when outside the menus)



DOWN

Press and release
Scroll menu items
Decrease values
Press for at least 5 sec
Function can be configured by the user
(par.H32)





SET (ENTER)

Press and release
Displays alarms (if active)
Opens Machine Status menu
Press for at least 5 sec
Opens Programming menu
Confirm commands





LEDs

 Reduced SET / Economy LED Flashing: economy Setpoint active Quick flashing: access to level2 parameters Off: otherwise	 Alarm LED Permanently on: alarm active Flashing: alarm acknowledged Off: otherwise
 Compressor LED Permanently on: compressor active Flashing: a delay, a protection or a locked start-up Off: otherwise	 Defrost LED Permanently on: defrost active Flashing: manual or D.I. activation Off: otherwise
 Fans LED Permanently on: fans active Off: otherwise	AUX Aux LED Permanently on: Aux output active Flashing: manual or D.I. activation of Deep Cooling
°C °C LED Permanently on: °C setting (dro =0) Off: otherwise	°F °F LED Permanently on: °F setting (dro =1) Off: otherwise
* To activate the LOC function: - enter the "Basic Commands" menu by pressing the key set. - press keys ① and ⏏ within 2 seconds. If the LOC function is Active and you try to enter the "Programming" menu, the text LOC appears. If this happens, the parameters are still displayed but cannot be edited. To disable the keypad lock, repeat the aforementioned procedure. * When switched on, the device performs a Lamp Test; the display and LEDs will flash for several seconds to check that they all function correctly.	

IDPLUS 902/961 CONNECTIONS

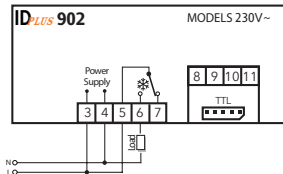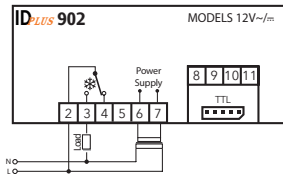

Probe connections

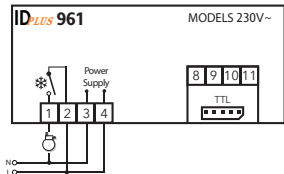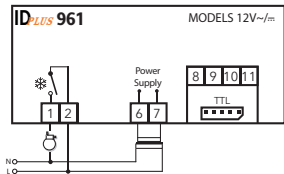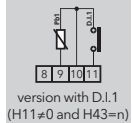

IDPlus 902: TERMINALS

OUT1	OUT1 relay → 2-3-4: 12V~ or 5-6-7: 230V~
Supply	6-7: models 12V~ or 3-4: models 230V~
N-L	230V~ power supply
10-9	Probe Pb1
10-11	Digital Input 1/ Pb3 probe
TTL	TTL Input


IDPlus 961: TERMINALS

1-2	Compressor relay
Supply	6-7: models 12V~ or 3-4: models 230V~
N-L	230V~ power supply
10-9	Probe Pb1
10-11	Digital Input 1/ Pb3 probe
TTL	TTL Input

Application settings


F = Functions H = Inputs and Outputs R = Relay Output	APP. 1	APP. 2	APP. 3	APP. 4
Cold application	X	X		X
Hot application			X	
F - Timed defrost	X			X
F - Alarm on Pb1	X	X	X	X
F - Overheating				X
H - Pb1 present	X	X	X	X
H - Pb3 / D.I.1 enabled	D.I.	D.I.		Pb3
R - Compressor/Filling	X	X		X
R - Heating elements			X	

Application 3

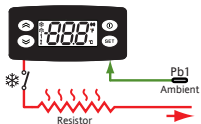


Ambient = Ambient
Evaporator = Evaporator
Resistor = Resistor

Application 1&2

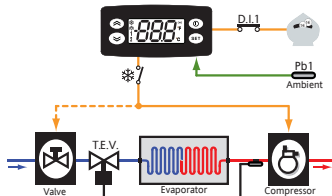


Application 4

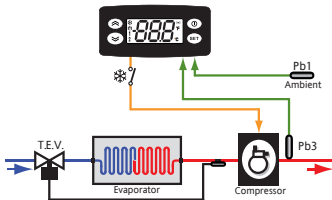

Valve = Valve
Compressor = Compressor
T.E.V. = Thermostatic Expansion Valve

IDPLUS 971 CONNECTIONS

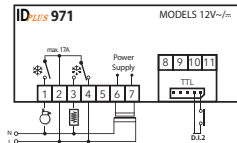


Probe connections



version with Pb3
(H11=0 and H43=y)



version with D.I.1
(H11≠0 and H43=n)

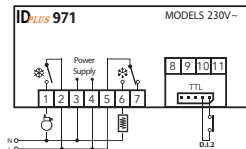

Application settings


F = Functions H = Inputs and Outputs R = Relay Output	APP. 1	APP. 2	APP. 3	APP. 4
Cold application	X	X	X	X
F - End defrost by time		X		X
F - End defrost by temperature	X		X	
F - Alarm on Pb1	X	X	X	X
F - Compressor OFF			X	
H - Pb1 present	X	X	X	X
H - Pb2 present	X		X	
H - Pb3 / D.I.1 enabled	D.I.	D.I.	D.I.	D.I.
H - Buzzer				X
R - Compressor	X	X	X	X
R - Heating elements	X	X		
R - Fans			X	
R - Alarm				X

IDplus 971: TERMINALS


	1-2: Compressor relay
	Defrost relay → 2-3-4: 12V~ or 5-6-7: 230V~
Supply	6-7: models 12V~ or 3-4: models 230V~
N-L	230V~ power supply

TTL	TTL Input or Digital Input 2
10-9	Probe Pb1
10-8	Probe Pb2
10-11	Digital Input 1 / Pb3 probe


Application 1

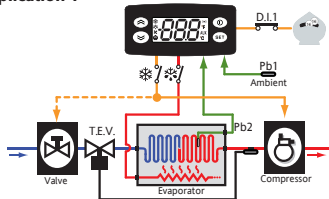


Application 2

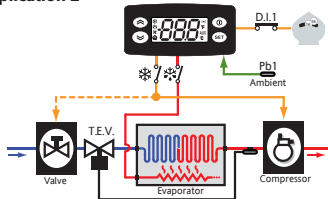

Application 3

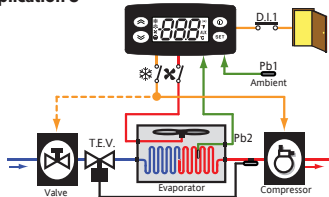

Application 4

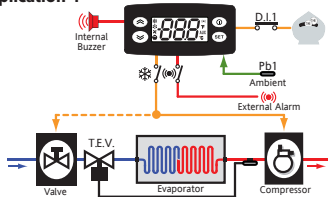

Ambient = Ambient

Evaporator = Evaporator

Internal Buzzer = Internal Buzzer



External Alarm = External Alarm

Valve = Valve

Compressor = Compressor

T.E.V. = Thermostatic Expansion Valve

IDPLUS 974 CONNECTIONS

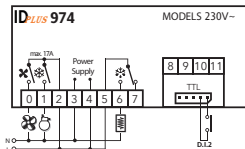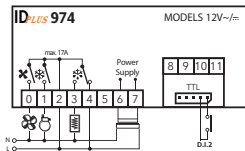

Probe connections



version with Pb3
(H11=0 and H43=y)



version with D.I.1
(H11≠0 and H43=n)

Application settings


F = Functions H = Inputs and Outputs R = Relay Output	APP. 1	APP. 2	APP. 3	APP. 4
Cold application	X	X	X	X
F - End defrost by temperature	X	X	X	X
F - HACCP		X		
F - Alarm on Pb1	X	X	X	X
H - Pb1 present	X	X	X	X
H - Pb2 present	X	X	X	X
H - Pb3 / D.I.1 enabled	D.I.	Pb3	D.I.	D.I.
H - Buzzer	X	X	X	X
R - Compressor	X	X	X	X
R - Heating elements	X	X		
R - Fans	X	X	X	X
R - Auxiliary			X	
R - Reversing valve				X

IDPlus 974: TERMINALS


	0-2: Fans relay
	1-2: Compressor relay
	Defrost relay → 2-3-4: 12V~ or 5-6-7: 230V~
Supply	6-7: models 12V~ or 3-4: models 230V~
N-L	230V~ power supply

10-9	probe Pb1
10-8	probe Pb2
10-11	Digital Input 1/ Pb3 probe
TTL	TTL Input or Digital Input 2


Application 1

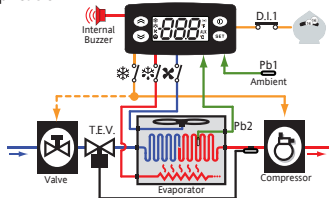


Application 2

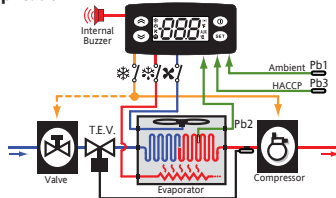

Application 3

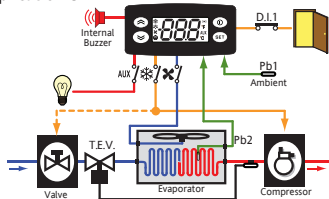

Application 4

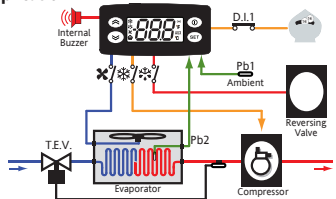

Ambient = Ambient
Evaporator = Evaporator
Compressor = Compressor
Reversing valve = Reversing valve

Valve = Valve
T.E.V. = Thermostatic Expansion Valve
AUX = AUX
Internal Buzzer = Internal Buzzer

LOADING DEFAULT APPLICATIONS

The procedure used to load one of the default applications is:

- when the instrument switches on, press and hold the **set** key: the label "AP1" will appear;
- scroll through the various applications (AP1-AP2-AP3-AP4) using the **⏮** and **⏭** keys;
- select the desired application using the key **set** ("AP3" in the example) or cancel the procedure by pressing the key **⏹**; alternatively wait for the timeout;
- if the operation is successful, the display will show "y", otherwise "n" will appear;
- after a few seconds the instrument will return to the main display.



LOCK SETPOINT MODIFICATION

The keypad can be locked by entering the "Basic Commands" menu using **set** and pressing **⏹** and **⏮** within 2 seconds, or by programming the "LOC" parameter (see "diS" folder). If the keypad is locked, the "Basic Commands" menu can be accessed and the Setpoint displayed, but the value cannot be modified.

INSTRUMENT ON/OFF

The instrument can be switched off by pressing the key **⏹** for longer than 5 seconds. In this condition, the adjustment algorithms and defrost cycles are disabled and the text "OFF" will appear on the display.

ACCESSING AND USING THE MENUS

Resources are organised into menus. Press and release the **set** key to access the "Machine Status" menu.

To access the "Programming" menu, press the **set** key for more than 5 seconds. If no keys are pressed for over 15 seconds (Timeout), or if the **⏹** key is pressed, the last value to appear on the display is confirmed.



MANUAL DEFROST CYCLE ACTIVATION

Hold down the  key for longer than 5 seconds. It is only activated if the temperature conditions are fulfilled. Otherwise, the display will flash three times to indicate that the operation will not be performed.

MOUNTING - DIMENSIONS

The device is designed for panel mounting. Drill a 29x71 mm hole and insert the instrument; secure it with the special brackets provided. Do not install the instrument in damp and/or dirty places; in fact, it is suitable for use in places with ordinary or normal levels of pollution.

Keep the area around the instrument cooling slots adequately ventilated.

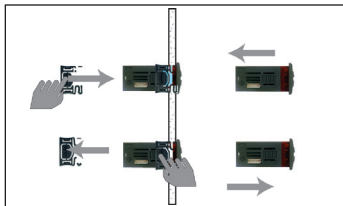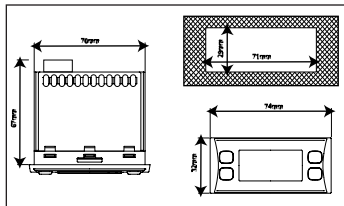

DIAGNOSTICS

Alarms are always indicated by the buzzer (if present) and the alarm icon .

To switch off the buzzer, press and release any key; the corresponding icon will continue to flash.

N.B.: If alarm exclusion times have been set (see "AL" folder) the alarm will not be signalled.

In the event of an alarm caused by a malfunctioning ambient probe (Pb1), the indication "E1" will appear on the display. For a malfunctioning evaporator probe (Pb2), the indication "E2" will appear (**IDPlus 971/974 only**). Finally, for a malfunctioning Pb3 probe, the indication "E3" will appear on the display.

ALARMS

Label	Fault	Cause	Effects	Remedy
E1	Cold room probe1 faulty	- measured values are outside operating range - Probe faulty/short-circuited/open	- Display label E1 - Alarm icon permanently on - Disable max/min alarm controller - Compressor operation based on parameters "Ont" and "OFt".	- check probe type (par. H00) - check probe wiring - replace probe
E2	Defrost probe2 faulty only on IDPlus 971/974	- measured values are outside operating range - probe faulty/short-circuited/open	- Display label E2 - Alarm icon permanently on - The Defrost will end due to Timeout (dEt) - The evaporator fans will be: on if the compressor is ON, or running in accordance with the FCO parameter if the compressor is OFF	- check probe type (par. H00) - check probe wiring - replace probe
E3	Probe3 faulty	- measured values are outside operating range - probe faulty/short-circuited/open	- Display label E3 - Alarm icon permanently on	- check probe type (par. H00) - check probe wiring - replace probe
AH1	Alarm for HIGH Pb1 temperature	value read by Pb1 > HAL after time of " tAO " (see "MAX/MIN TEMP. ALARMS")	- Recording of label AH1 in folder AL - No effect on regulation	Wait until value read by Pb1 returns below HAL
AL1	Alarm for LOW Pb1 temperature	value read by Pb1 < LAL after time of " tAO " (see "MAX/MIN TEMP. ALARMS")	- Recording of label AL1 in folder AL - No effect on regulation	Wait until value read by Pb1 returns above LAL
EA	External alarm	Digital input activated (H11 = ± 5)	- Recording of label EA in folder AL - Alarm icon permanently on - Regulation locked if rLO = y	check and remove the external cause which triggered the alarm on the D.I.
OPd	Door open alarm	digital input activation (H11 = ± 4) (for longer than tdO)	- Recording of label Opd in folder AL - Alarm icon permanently on - Controller locked	- close the door - delay function defined by OA0
Ad2	Defrost due to timeout	end of defrost cycle due to timeout rather than due to defrost end temperature being recorded by Pb2	- Recording of label Ad2 in folder AL - Alarm icon permanently on	wait for the next defrost cycle for automatic return

Label	Fault	Cause	Effects	Remedy
COH	Over Heating alarm	Pb3 value set by parameter SA3 exceeded	- Recording of label COH in folder AL - Alarm icon permanently on - Regulation locked (Compressor)	wait for the temperature to return to a value of SA3 (Setpoint) minus dA3 (differential)
nPA	General pressure switch alarm	Activation of pressure alarm by general pressure switch	If the number N of pressure switch activations is: N < PEn: - Recording of folder nPA in folder AL, with the number of pressure switch activations - Regulation locked (Compressor and Fans)	check and remove the cause which triggered the alarm on the D.I. (Automatic Reset)
PAL	General pressure switch alarm	Activation of pressure alarm by general pressure switch	If the number N of pressure switch activations is: N = PEn: - Display label PAL - Recording of label PA in folder AL - Alarm LED steady - Regulation locked (Compressor and Fans)	- Switch the device off and back on again - Reset alarms by entering the functions folder and selecting the rAP function (Manual Reset)
HC n	Max/Min Pb3 value when out of range (SLH...SHH)	Logs the Max/Min value recorded by Pb3 when it exceeds range SLH...SHH. " n " represents the sequential number of times the range is exceeded.	- Recording of folder "HC n" in folder AL - Alarm LED steady - No effect on regulation	NB: " n " can assume the values 1 to 8. If n > 8 , folder HC8 will flash and the system will overwrite folders where n=1
tC n	Pb3 out-of-range dwell time (SLH...SHH)	Stores the dwell time of the Pb3 value outside range SLH...SHH. " n " represents the sequential number of times the range is exceeded.	- Recording of folder "tC n" in folder AL - Alarm LED steady - No effect on regulation	NB: " n " can assume the values 1 to 8. If n > 8 , folder HC8 will flash and the system will overwrite folders where n=1
bC n	Value recorded by Pb3 on return from bOt	Logs the value recorded by Pb3 on return from a blackout. " n " represents the sequential number of blackouts that have occurred.	- Recording of folder "bC n" in folder AL - No effect on regulation	NB: " n " can assume the values 1 to 8. If n > 8 , folder bC8 will flash and the system will overwrite folders where n=1
bt n	Pb3 out-of-range dwell time during bOt	Stores the out-of-range dwell time of the Pb3 value during a blackout. " n " represents the sequential number of blackouts that have occurred.	- Recording of folder "bt n" in folder AL. The value contained will be 0 if the value of Pb3 has remained within the range, ≠ 0 if the value has gone outside of the range - No effect on regulation	N.B.: " n " can assume the values 1 to 8. If n > 8 , folder bC8 will flash and the system will overwrite folders where n=1
NOTE: to delete folders " HC n ", " tC n ", " bC n " and " bt n " from folder AL, start function rES in folder FnC.				

PASSWORD

Password "PA1": used to access **User** parameters. The password is not enabled by default (**PS1**=0). To enable it (**PS1**≠0): press and hold **set** for longer than 5 seconds, scroll through the parameters using **⏮** and **⏭** until you see the label **PS1**, press **set** to display the value, modify it using **⏮** and **⏭**, then save it by pressing **set** or **Ⓜ**. If enabled, it will be required in order to access the User parameters.

Password "PA2": used to access **Installer** parameters. The password is enabled by default (**PS2**=15). To modify it (**PS2**≠15): press **set** and hold for longer than 5 seconds, scroll through the parameters using **⏮** and **⏭** until you see the label **PA2**, press **set**, set the value to "15" using **⏮** and **⏭**, then confirm using **set**. Scroll through the folders until you find the label **diS** and press **set** to enter. Scroll through the parameters using **⏮** and **⏭** until you see the label **PS2**, press **set** to display the value, modify it using **⏮** and **⏭**, then save it by pressing **set** or **Ⓜ**. The visibility of "PA2" is as follows:

- 1) **PA1** and **PA2** ≠ 0: Press and hold **set** for longer than 5 seconds to display "PA1" and "PA2". It will then be possible to decide whether to access the User (PA1) or the Installer (PA2) parameters.
 - 2) **Otherwise:** The password "PA2" is amongst the level1 parameters. If enabled, it will be required when accessing the Installer parameters; to enter it, proceed as instructed for password "PA1".
- If the password entered is incorrect, the label PA1/PA2 will be displayed again and the procedure will need to be repeated.

USING THE COPY CARD


The Copy Card is connected to the serial port (TTL) and allows rapid programming of the instrument parameters. Access **Installer** parameters by entering "PA2", scroll through the folders using **⏮** and **⏭** until folder **FPr** appears. Select it using **set**, scroll through the parameters using **⏮** and **⏭**, then select the function using **set** (e.g. **UL**).

- **Upload (UL):** Select UL and press **set**. This function uploads the programming parameters from the instrument to the card. If the procedure is a success, "**y**", will appear on the display, otherwise "**n**" will appear.
- **Format (Fr):** This command is used to format the copy card, (recommended when using the card for the first time).
Important: the **Fr** parameter deletes all data present. This operation cannot be cancelled.
- **Download:** Connect the Copy Card when the instrument is switched off. At power-on, data is downloaded from the copy card to the instrument automatically. At the end of the lamp test, the display will show "**dLy**" if the operation was successful and "**dLn**" if not.

NOTE: After downloading, the instrument works with the settings of the new map just downloaded.

MACHINE STATUS MENU

Access the Machine Status menu by pressing **set** and releasing the key. If no alarms are active, the "SEt" label appears. Use the keys **⏮** and **⏭** to scroll through all the folders in the menu:



- AL: alarms folder (**only visible if an alarm is active**);
- SEt: Setpoint setting folder;
- Pb1: probe 1 - Pb1 folder;
- Pb2: probe 2 - Pb2* folder(**IDPlus 971/974 models only**);
- Pb3: probe 3 - Pb3** folder;

* **folder displayed if Pb2 present (H42 = y)**

** **folder displayed if Pb3 present (H11 = 0 and H43 = y)**

Setting the Setpoint: To display the Setpoint value press the **set** key when the "SEt" label is displayed. The Setpoint value appears on the display. To change the Setpoint value, press the **⏮** and **⏭** keys within 15 seconds. Press **set** to confirm the modification.

Displaying the probes: When labels Pb1, Pb2 or Pb3 are present, press the **set** key to view the value measured by the corresponding probe (NOTE: the value cannot be modified).

PROGRAMMING MENU

To access the "Programming" menu, press the **set** key for more than 5 seconds. If specified, an access PASSWORD will be requested: "PA1" for User parameters and "PA2" for Installer parameters (see "PASSWORD" paragraph).


User parameters: When accessed, the display will show the first parameter (e.g. "diF"). Press **⏮** and **⏭** to scroll through all the parameters on the current level. Select the desired parameter by pressing **set**. Press **⏮** and **⏭** to modify it and **set** to save the changes.

Installer parameters: When accessed, the display will show the first folder (e.g. "CP"). Press **⏮** and **⏭** to scroll through the folders on the current level. Select the desired folder using **set**. Press **⏮** and **⏭** to scroll through the parameters in the current folder and select the parameter using **set**. Press **⏮** and **⏭** to modify it and **set** to save the changes.


NOTE: Make sure you switch the instrument off and on again each time the parameter configuration is changed, in order to prevent malfunctioning in the configuration and/or timing in progress.

MAX/MIN TEMPERATURE ALARMS

Temperature as a value relative to Setpoint (Att=1)

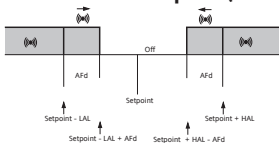

Temperature as an Absolute value (Att=0)



Minimum alarm	Temp. $\leq$ Set + LAL *	Temp. $\leq$ LAL (LAL with sign)
Maximum alarm	Temp. $\geq$ Set + HAL **	Temp. $\geq$ HAL (HAL with sign)
Returning from minimum temperature alarm	Temp. $\geq$ Set + LAL + AFd or $\geq$ Set - LAL + AFd (LAL < 0)	Temp. $\geq$ LAL + AFd
Returning from maximum temperature alarm	Temp. $\leq$ Set + HAL - AFd (HAL > 0)	Temp. $\leq$ HAL - AFd
	* if LAL is negative, Set + LAL < Set ** if HAL is negative, Set + HAL < Set	

LIABILITY AND RESIDUAL RISKS

ELIWELL CONTROLS SRL declines any liability for damage due to:

- installation/uses different from those specified and, in particular, not complying with the safety regulations and/or instructions given in this document;
- use on panels that do not provide adequate protection against electric shocks, water or dust when assembled;
- use on panels allowing access to dangerous parts without the use of tools;
- tampering with and/or modifying the product;
- installation/use on panels not complying with current standards and regulations.

DISCLAIMER

This document is the exclusive property of ELIWELL CONTROLS SRL and may not be reproduced or circulated unless expressly authorised by ELIWELL CONTROLS SRL itself. Every care has been taken in preparing this document; nevertheless ELIWELL CONTROLS SRL cannot accept liability for any damage resulting from its use. The same applies to any person or company involved in preparing and editing this document. ELIWELL CONTROLS SRL reserves the right to make aesthetic or functional changes at any time without notice.

ELECTRICAL CONNECTIONS

Attention! Make sure the machine is switched off before working on the electrical connections.

The instrument is equipped with screw or disconnectable terminal blocks for connecting electrical cables with a max. diameter of 2.5 mm² (one wire per terminal for power connections): for the terminal ratings, see the label on the instrument. Do not exceed the maximum permissible current; in case of higher loads, use a suitably rated contactor. Make sure the power supply voltage complies with that required by the instrument.

Probes have no connection polarity and can be extended using a normal bipolar cable (note that the extension of the probes influences the electromagnetic compatibility - EMC - of the instrument: take great care with the wiring).

Probe cables, power supply cables and the TTL serial cable should be routed separately from power cables.

CONDITIONS OF USE

Permitted use

For safety reasons, the instrument must be installed and used according to the instructions supplied and, in particular, parts under dangerous voltages must not be accessible in normal conditions. The device must be adequately protected from water and dust with regard to its application, and must only be accessible using tools (except for the front panel). The device is suitable for use in household refrigeration appliances and/or similar equipment and has been tested for safety aspects in accordance with the harmonised European reference standards.

Improper use

Any use other than that expressly permitted is prohibited. The relay contacts provided are of a functional type and subject to failure: any protection devices required by product standards, or suggested by common sense for obvious safety requirements, must be installed externally to the instrument.

TECHNICAL DATA (EN 60730-2-9)

Classification:	operation (not safety) device for incorporation
Mounting:	panel mounting with 71x29 mm (+0.2/-0.1 mm) drilling template
Type of action:	1.B
Pollution class:	2
Material class:	IIIa
Overvoltage category:	II
Rated impulse voltage:	2500V
Temperature:	Use: -5 ... +55°C - Storage: -30 ... +85 °C
Power supply:	12V~/= (±10%) 50/60 Hz or 230V~ (±10%) 50/60 Hz
Consumption:	4.5W max
Digital outputs (relay):	refer to the label on the device
Fire resistance category:	D
Software class:	A

NOTE: check the power supply specified on the instrument label; contact our Sales Office for power supply and relay ratings.

FURTHER INFORMATION

Input Characteristics

Display range:	NTC: -50.0°C ... +110°C; PTC: -55.0°C ... +140°C; PT1000: -55.0°C ... +150°C (on display with 3 digits + sign)
Accuracy:	NTC, PTC, PT1000 (-55,0°C...+70°C): Better than 0.5% of full scale +1 digit PT1000 (+70,0°C...+150°C): Better than 0.6% of full scale +1 digit
Resolution:	0.1 °C
Buzzer:	YES (depending on model)
Analogue inputs:	IDPlus 902/961: 1 NTC (default)/PTC/PT1000 (can be selected using parameter H00) IDPlus 971/974: 2 NTC (default)/PTC/PT1000 (can be selected using parameter H00)
Digital inputs:	IDPlus 902/961: 1 voltage-free digital input; IDPlus 971/974: 2 voltage-free digital inputs
N.B.: - D.I.1 can also be configured as a probe input (H11 =0 and H43 =y) - D.I.2, if activated, should be connected to terminals 1-2 of the TTL (IDPlus 971/974)	

Output Characteristics

Digital outputs:

IDPlus 902: 1 OUT1 relay: N.O. 8(4)A - N.C. 6(3)A max 250V~

IDPlus 961: 1 Compressor relay: UL60730 (A) 2Hp (12FLA - 72LRA) max 240V~

IDPlus 971: 1 Defrost relay: N.O. 8(4)A - N.C. 6(3)A max 250V~

1 Compressor relay: UL60730 (A) 2Hp (12FLA - 72LRA) max 240V~ or

IDPlus 974: 1 Defrost relay: N.O. 8(4)A - N.C. 6(3)A max 250V~

1 Compressor relay: UL60730 (A) 2Hp (12FLA - 72LRA) max 240V~ or

1 Fans relay: 5(2)A max 250V~

Mechanical Characteristics

Casing: PC+ABS UL94 V-0 resin casing, polycarbonate window, thermoplastic resin keys

Dimensions: front panel 74x32 mm, depth 59 mm (without terminals)

Terminals: screw/disconnectable terminals for cables with a diameter of 2.5mm²

Connectors: TTL for connection of Copy Card + D.I.2 (**IDPlus 971/974 models only**)

Humidity: Use / Storage: 10...90% RH (non-condensing)

Regulations

Electromagnetic compatibility: The device conforms to Directive 2004/108/EC

Safety: The device conforms to Directive 2006/95/EC

Food Safety: The device complies with standard EN 13485 as follows:

- suitable for storage

- application: air

- climate range A

- measurement class 1 in the range from -25°C to 15°C (*)

(* **exclusively using Eliwell probes**)

NOTE: The technical specifications given in this document regarding measurement (range, accuracy, resolution, etc.) refer to the instrument and not to any accessories provided, such as the probes. This means, for example, that the error introduced by the probe must be added to the typical error of the instrument.

DESCRIPTION OF IDPLUS 902/961 FAMILY

IDPlus 902/961 devices are controllers with 1 relay output, 1 temperature regulation sensor and 1 multifunctional Digital/Temperature input.

Temperature control and compressor start/stop, plus natural defrost on compressor stop.
Heating function: the controller can also be used as a simple ON/OFF thermostat for heating applications.

The Digital input (D.I.) can be used for:

- Energy saving
- Defrost activation
- door switch
- Standby
- external alarm
- Deep Cooling
- pressure switch
- HACCP alarms

TABLE OF USER MENU PARAMETERS (IDPLUS 902/961)

PAR.	DESCRIPTION	RANGE	APP1	APP2	APP3	APP4	M.U.
SEt	Temperature control SEtpoint	LSE ... HSE	0,0	0,0	0,0	-2,0	°C/°F
diF	Compressor relay activation differential	0,1 ... 30,0	2,0	2,0	2,0	0,1	°C/°F
HSE	Maximum value that can be assigned to the Setpoint	LSE ... 302	99,0	140	140	5,0	°C/°F
LSE	Minimum value that can be assigned to the Setpoint	-58.0 ... HSE	-50,0	-55,0	-55,0	-10,0	°C/°F
dit	Interval between the start of two consecutive defrost cycles	0 ... 250	6			8	hours
dEt	Defrost timeout	1 ... 250	30			30	min
HAL	Maximum temperature alarm	LAL ... 150	50,0	150	150	50,0	°C/°F
LAL	Minimum temperature alarm	-50.0 ... HAL	-50,0	-50,0	-50,0	-50,0	°C/°F
SA3	Probe 3 alarm Setpoint	-50.0 ... 150				70,0	°C/°F
LOC	Basic commands modification lock	n/y	n	n	n	n	flag
PS1	PAssword 1 for access to QUICK menu parameters	0 ... 250	0	0	0	0	num
CA1	Calibration1. Value to be added to the value read by probe 1	-12,0 ... 12,0	0,0	0,0	0,0	0,0	°C/°F
CA3	Calibration3. Value to be added to the value read by probe 3	-12,0 ... 12,0				0,0	°C/°F
ddl	Display mode during defrost	0/1/2	0			0	num
Ldd	Display lock disabling timeout. 0 = function disabled	0 ... 255	30			30	min
H43	Probe 3 present. n = not present; y = present	n/y				y	flag
rEL	firmware rELease. Reserved: read-only parameter	/	/	/	/	/	/
tAb	tAbLe of parameters. Reserved: read-only parameter	/	/	/	/	/	/

Notes: ** The USER menu parameters also include "PA2", which can be used to access the Installer menu

*** For the complete list of parameters, see: APPENDIX A: **Table of Installer menu parameters**

TABLE OF INSTALLER MENU PARAMETERS (IDPLUS 902/961)

PAR.	DESCRIPTION	RANGE	App1	App2	App3	App4	M.U.
SEt	Temperature control Setpoint. COMPRESSOR ("CP" folder)	LSE ... HSE	0,0	0,0	0,0	-2,0	°C/°F
diF	diFferential. Compressor relay activation differential.	0,1...30,0	2,0	2,0	2,0	0,1	°C/°F
HSE	Higher SEt. Maximum value that can be assigned to the Setpoint.	LSE...302	99,0	140	140	5,0	°C/°F
LSE	Lower SEt. Minimum value that can be assigned to the Setpoint.	-58,0...HSE	-50,0	-55,0	-55,0	-10,0	°C/°F
OSP	Temperature value to be added to the Setpoint if reduced set enabled (Economy function).	-30,0...30,0	3,0	3,0	0,0	0,0	°C/°F
Hc	Control mode. "H" = Hot, "C" = Cold.	C/H	C	C	H	C	flag
Ont	Controller on time for faulty probe. if Ont = 1 and Oft = 0, the compressor remains on; if Ont = 1 and Oft > 0 it runs in duty cycle mode.	0 ... 250	0	0	0	0	min
Oft	Controller off time for faulty probe. if Oft = 1 and Ont = 0, the controller remains off; if Oft = 1 and Ont > 0, it operates in duty cycle mode.	0 ... 250	1	1	1	1	min
dOn	Compressor relay activation delay after request.	0 ... 250	0	0	0	0	secs
dOF	Delay after switching off and subsequent activation.	0 ... 250	0	0	0	0	min
dbi	Delay between two consecutive compressor activations.	0 ... 250	0	0	0	0	min
OdO (!)	Delay in activating outputs after the instrument is switched on or after a power failure. 0 = not active.	0 ... 250	0	0	0	0	min
dcS	Deep Cooling cycle Setpoint.	-58,0...302	0,0	0,0	0,0	0,0	°C/°F
tdc	Deep Cooling cycle duration.	0 ... 255	0	0	0	0	min*10
dcc	Defrost activation delay after a Deep Cooling cycle.	0 ... 255	0	0	0	0	min
DEFROST ("dEF" folder)							
dit	Interval between the start of two consecutive defrost cycles.	0 ... 250	6	0	0	8	hours
dCt	Selection of count mode for the defrost interval. 0 = compressor running time; 1 = appliance running time; 2 = A defrost cycle is run at each compressor stop.	0/1/2	1	1	1	1	num

PAR.	DESCRIPTION	RANGE	App1	App2	App3	App4	M.U.
dOH	Delay for start of first defrost after request.	0 ... 59	0	0	0	0	min
dEt	Defrost timeout; determines the maximum defrost duration.	1 ... 250	30	1	1	30	min
dPO	Determines whether the instrument must enter defrost mode at start-up.	n/y	n	n	n	n	flag
ALARMS ("AL" folder)							
Att	Can be used to select absolute (Att=0) or relative (Att=1) values for HAL and LAL parameters.	0/1	0	0	0	0	num
Afd	Alarm differential.	1,0 ... 50,0	2,0	2,0	2,0	2,0	°C/°F
HAL	Maximum temperature alarm.	LAL...302	50,0	150	150	50,0	°C/°F
LAL	Minimum temperature alarm.	-58.0...HAL	-50,0	-50,0	-50,0	-50,0	°C/°F
PAO	Alarm exclusion time after re-activation following a power failure.	0 ... 10	0	0	0	0	hours
dAO	Temperature alarm exclusion time after defrost.	0 ... 999	0	0	0	0	min
OA0	Alarm signalling delay after disabling of digital input.	0 ... 10	0	0	0	0	hours
tdO	Delay in door open alarm activation.	0 ... 250	0	0	0	0	min
tAO	Time delay for temperature alarm indication.	0 ... 250	0	0	0	0	min
rLO	An external alarm locks the controllers. n = does not lock; y = locks.	n/y	n	n	n	n	flag
SA3	Probe 3 alarm Setpoint.	-58,0...302	0,0	0,0	0,0	70,0	°C/°F
dA3	Probe 3 alarm differential.	1,0 ... 50,0	1,0	1,0	1,0	10,0	°C/°F
LIGHTS & DIGITAL INPUTS ("Lit" folder)							
dOd	Digital input for switching off utilities. 0 = disabled; 1 = disables fans; 2 = disables the compressor; 3 = disables fans and compressor.	0/1/2/3	0	0	0	0	num
dAd	Activation delay for digital input.	0 ... 255	0	0	0	0	min
dCO	Compressor deactivation delay after door opened.	0 ... 255	1	1	1	1	min
PRESSURE SWITCH ("PrE" folder)							
Pen	Number of errors allowed per maximum/minimum pressure switch input.	0 ... 15	0	0	0	0	num
PEI	Minimum/maximum pressure switch error count interval.	1 ... 99	1	1	1	1	min
PEt	Delay in activating compressor after pressure switch deactivation.	0 ... 255	0	0	0	0	min

PAR.	DESCRIPTION	RANGE	App1	App2	App3	App4	M.U.
COMMUNICATION ("Add" folder)							
PtS	Communication protocol selection. t = Televis; d = Modbus.	t/d	t	t	t	t	flag
dEA	Index of the device inside the family (valid values from 0 to 14).	0 ... 14	0	0	0	0	num
FAA	Device family - valid values from 0 to 14.	0 ... 14	0	0	0	0	num
Pty	Modbus parity bit. n = none; E = even; o = odd.	n/E/o	n	n	n	n	num
StP	Modbus stop bit.	1b/2b	1b	1b	1b	1b	flag
DISPLAY ("diS" folder)							
LOC	Basic commands modification lock. It is still possible to enter parameter programming mode and modify them. y = yes; n = no.	n/y	n	n	n	n	flag
PS1	PASword1: if PS1≠0 is the access key to " User " parameters.	0 ... 250	0	0	0	0	num
PS2	PASword2: if PS2≠0 is the access key to " Installer " parameters.	0 ... 250	15	15	15	15	num
ndt	Display with decimal point. y = yes; n = no.	n/y	y	y	y	y	flag
CA1	Calibration 1. Temperature value to be added to the Pb1 value.	-12,0... 12,0	0,0	0,0	0,0	0,0	°C/°F
CA3	Calibration 3. Temperature value to be added to the Pb3 value.	-12,0... 12,0	0,0	0,0	0,0	0,0	°C/°F
ddl	Display mode during defrost. 0 = display temperature recorded by Pb1; 1 = lock recorded Pb1 value at the start of the defrost cycle; 2 = display the "dEF" label.	0/1/2	0	0	0	0	num
Ldd	Timeout value for display unlock - dEF label	0 ... 255	30	30	30	30	min
dro	Select the unit of measurement used when displaying the temperature recorded by the probes. (0 = °C, 1 = °F). NOTE: switching between °C and °F or vice-versa DOES NOT modify the SET, diF values, etc. (e.g. Setpoint=10°C becomes 10°F)	0/1	0	0	0	0	flag
ddd	Selects type of value to display. 0 = Setpoint; 1 = probe Pb1; 2 = probe Pb2; 3 = probe Pb3	0/1/2/3	1	1	1	1	num
HACCP ("HCP" folder)							
SHH	Maximum HACCP alarm signals threshold.	-55,0... 150	0,0	0,0	0,0	0,0	°C/°F
SLH	Minimum HACCP alarm signals threshold.	-55,0... 150	0,0	0,0	0,0	0,0	°C/°F
drA	Minimum time spent in critical range for the event to be recorded. After this a HACCP alarm will be triggered and logged.	0 ... 99	0	0	0	0	min
drH	HACCP alarm reset time after last reset.	0 ... 250	0	0	0	0	hours

PAR.	DESCRIPTION	RANGE	App1	App2	App3	App4	M.U.
H50	Enable HACCP and alarm relay functions. 0 = HACCP alarms NOT enabled; 1 = HACCP alarms enabled and alarm relay NOT enabled; 2 = HACCP alarms enabled and alarm relay enabled.	0/1/2	0	0	0	0	num
H51	HACCP alarm exclusion time.	0 ... 250	0	0	0	0	min
CONFIGURATION ("CnF" folder)							
H00	Probe type selection. 0 = PTC; 1 = NTC; 2 = PT1000.	0/1/2	1	1	1	1	num
H11	Configuration of digital input 1/polarity. 0 = disabled; ±1 = defrost; ±2 = economy Setpoint; ±3 = not used; ±4 = door switch; ±5 = external alarm; ±6 = Standby; ±7 = pressure switch; ±8 = Deep Cooling; ±9 = disable HACCP alarm logging. NOTE: • the "+" sign indicates that the input is active if the contact is closed. • the "-" sign indicates that the input is active if the contact is open.	-9 ... +9	2	2	0	0	num
H21	(IDPlus 961 only) . Configurability of digital output 1 (*). 0 = disabled; 1 = compressor; 2 = defrost; 3 = fans; 4 = alarm; 5 = AUX; 6 = Standby.	0 ... 6	1	1	1	1	num
H22	(IDPlus 902 only) . Configurability of digital output 1 (*). Same as H21.	0 ... 6	1	1	1	1	num
H31	Configurability of UP key. 0 = disabled; 1 = defrost; 2 = not used; 3 = economy Setpoint; 4 = Standby; 5 = reset HACCP alarms; 6 = disable HACCP alarms; 7 = Deep Cooling.	0 ... 7	1	0	0	1	num
H32	Configurability of DOWN key. Same as H31.	0 ... 7	0	0	0	0	num
H43	Probe Pb3 present. n = not present; y = present.	n/y	n	n	n	y	flag
reL	Device version. Read-only parameter.	/	/	/	/	/	/
tAb	tAble of parameters. Reserved: read-only parameter.	/	/	/	/	/	/
COPY CARD ("FPr" folder)							
UL	Programming parameter transfer from instrument to Copy Card.	/	/	/	/	/	/
Fr	Format Copy Card. Erase all data contained in the Copy Card. NOTE: if parameter "Fr" is used, the data entered will be permanently lost. This operation cannot be cancelled.	/	/	/	/	/	/
FUNCTIONS ("FnC" folder)							
rAP	Reset pressure switch alarms	/	/	/	/	/	/
rES	Reset HACCP alarms	/	/	/	/	/	/

NOTE: If one or more parameters marked with (!) are modified, the controller MUST be switched off and then switched on again to ensure correct operation.

DESCRIPTION OF IDPLUS 971 FAMILY

IDPlus 971 devices are controllers with 2 relay outputs, 2 temperature sensors (regulation and evaporator), a multifunctional Digital/Temperature input and a digital input.

The relay output can be used to control:

- compressor
- defrost heating elements
- evaporator fans
- AUX output
- temperature alarm
- Standby

The second probe can be used to control the defrost cycle and the evaporator fans.

The Digital inputs (D.I.1 and D.I.2) can be used for:

- Energy saving
- Defrost activation
- AUX management
- door switch
- Standby
- external alarm
- Deep Cooling
- pressure switch
- HACCP alarms

TABLE OF USER MENU PARAMETERS (IDPLUS 971)

PAR.	DESCRIPTION	RANGE	APP1	APP2	APP3	APP4	M.U.
SEt	Temperature control SEtpoint	LSE ... HSE	0,0	0,0	0,0	0,0	°C/°F
diF	Compressor relay activation differential	0,1 ... 30,0	2,0	2,0	2,0	2,0	°C/°F
HSE	Maximum value that can be assigned to the Setpoint	LSE ... 302	99,0	99,0	99,0	99,0	°C/°F
LSE	Minimum value that can be assigned to the Setpoint	-58,0 ... HSE	-50,0	-50,0	-50,0	-50,0	°C/°F
dtY	Type of defrost	0/1/2	0	0			num
diT	Interval between the start of two consecutive defrost cycles	0 ... 250	6	6	6	6	hours
dEt	Defrost timeout	1 ... 250	30	30	30	30	min
dSt	End defrost temperature	-50,0 ... 150	8,0		8,0		°C/°F
FSt	Fans stop temperature	-50,0 ... 150			50,0		°C/°F
Fdt	Fan activation delay after a defrost cycle	0 ... 250			0		min
dt	Coil drainage time	0 ... 250			0		min
dFd	To select or exclude the fans	n/y			y		flag
HAL	Maximum temperature alarm	LAL ... 150	50,0	50,0	50,0	50,0	°C/°F
LAL	Minimum temperature alarm	-50,0 ... HAL	-50,0	-50,0	-50,0	-50,0	°C/°F
dOd	Enable utility switch-off on activation of door switch	0/1/2/3			0		num
dCO	Compressor deactivation delay after door opened	0 ... 255			1		min
LOC	Basic commands modification lock	n/y	n	n	n	n	flag
PS1	PAssword 1 for access to QUICK menu parameters	0 ... 250	0	0	0	0	num
CA1	Calibration1. Value to be added to the value read by probe 1	-12,0 ... 12,0	0,0	0,0	0,0	0,0	°C/°F
CA2	Calibration2. Value to be added to the value read by probe 2	-12,0 ... 12,0	0,0		0,0		°C/°F
ddL	Display mode during defrost	0/1/2	0	0	0	0	num
Ldd	Display lock disabling timeout. 0 = function disabled	0 ... 255	30	30	30	30	min
H42	Evaporator probe present. n = not present; y = present	n/y	y		y		flag
rEL	firmware rELease. Reserved: read-only parameter	/	/	/	/	/	/
tAb	Table of parameters. Reserved: read-only parameter	/	/	/	/	/	/

Notes: ** The USER menu parameters also include "PA2", which can be used to access the Installer menu

*** For the complete list of parameters, see: APPENDIX A: **Table of** Installer menu parameters

TABLE OF INSTALLER MENU PARAMETERS (IDPLUS 971)

PAR.	DESCRIPTION	RANGE	App1	App2	App3	App4	M.U.
SEt	Temperature control SEtpoint. COMPRESSOR ("CP" folder)	LSE ... HSE	0,0	0,0	0,0	0,0	°C/°F
diF	diFferential. Compressor relay activation differential.	0,1...30,0	2,0	2,0	2,0	2,0	°C/°F
HSE	Higher SEt. Maximum value that can be assigned to the Setpoint.	LSE...302	99,0	99,0	99,0	99,0	°C/°F
LSE	Lower SEt. Minimum value that can be assigned to the Setpoint.	-58,0...HSE	-50,0	-50,0	-50,0	-50,0	°C/°F
OSP	Temperature value to be added to the Setpoint if reduced set enabled (Economy function).	-30,0...30,0	3,0	3,0	0,0	3,0	°C/°F
Hc	Control mode. "H" = Hot, "C" = Cold.	C/H	C	C	C	C	flag
Ont	Controller on time for faulty probe. If Ont = 1 and Oft = 0 , the compressor remains on; if Ont = 1 and Oft > 0 it runs in duty cycle mode.	0 ... 250	0	0	0	0	min
Oft	Controller off time for faulty probe. If Oft = 1 and Ont = 0 , the controller remains off; if Oft = 1 and Ont > 0 , it operates in duty cycle mode.	0 ... 250	1	1	1	1	min
dOn	Compressor relay activation delay after request	0 ... 250	0	0	0	0	secs
dOF	Delay after switching off and subsequent activation	0 ... 250	0	0	0	0	min
dbi	Delay between two consecutive compressor activations	0 ... 250	0	0	0	0	min
OdO (!)	Delay in activating outputs after the instrument is switched on or after a power failure. 0 = not active.	0 ... 250	0	0	0	0	min
dcS	Deep Cooling cycle Setpoint.	-58,0...302	0,0	0,0	0,0	0,0	°C/°F
tdc	Deep Cooling cycle duration.	0 ... 255	0	0	0	0	min*10
dcc	Defrost activation delay after a Deep Cooling cycle.	0 ... 255	0	0	0	0	min
	DEFROST ("DEF" folder)						
dtY	Type of defrost. 0 = electrical defrost; 1 = reverse cycle defrost; 2 = defrost independent of compressor.	0/1/2	0	0	0	0	num
dit	Interval between the start of two consecutive defrost cycles.	0 ... 250	6	6	6	6	hours

PAR.	DESCRIPTION	RANGE	App1	App2	App3	App4	M.U.
dCt	Selection of count mode for the defrost interval. 0 = compressor running time; 1 = appliance running time; 2 = A defrost cycle is run at each compressor stop	0/1/2	1	1	1	1	num
dOH	Delay for start of first defrost after request	0 ... 59	0	0	0	0	min
dEt	Defrost timeout; determines the maximum defrost duration	1 ... 250	30	30	30	30	min
dSt	Defrost end temperature - determined by the evaporator probe	-50,0...150	8,0	50,0	8,0	50,0	°C/°F
dPO	Determines whether the instrument must enter defrost mode at start-up	n/y	n	n	n	n	flag
FANS ("FAn" folder)							
FSt	Fans stop temperature	-58,0...302	50,0	50,0	50,0	50,0	°C/°F
FAd	Fan activation differential	1,0 ... 50,0	2,0	2,0	2,0	2,0	°C/°F
Fdt	Fan activation delay after a defrost cycle	0 ... 250	0	0	0	0	min
dt	Coil drainage time	0 ... 250	0	0	0	0	min
dFd	Allows evaporator fan exclusion to be selected or not selected during defrosting. y = yes (fans excluded); n = no	n/y	y	y	y	y	flag
FCO	Selects or deselects fan deactivation at compressor OFF. 0 = fans off; 1 = fans active; 2 = duty cycle	0/1/2	0	0	0	0	num
FOn	Fans ON time in day duty cycle	0 ... 99	0	0	0	0	min
FOF	Fans OFF time in day duty cycle	0 ... 99	0	0	0	0	min
Fnn	Fans ON time in night duty cycle	0 ... 99	0	0	0	0	min
FnF	Fans OFF time in night duty cycle	0 ... 99	0	0	0	0	min
ESF	Night mode activation. n = no; y = yes	n/y	n	n	n	n	flag
ALARMS ("AL" folder)							
Att	Can be used to select absolute (Att=0) or relative (Att=1) values for HAL and LAL parameters	0/1	0	0	0	0	num
Afd	Alarm differential	1,0 ... 50,0	2,0	2,0	2,0	2,0	°C/°F
HAL	Maximum temperature alarm	LAL...302	50,0	50,0	50,0	50,0	°C/°F
LAL	Minimum temperature alarm	-58,0...HAL	-50,0	-50,0	-50,0	-50,0	°C/°F
PAO	Alarm exclusion time after re-activation following a power failure	0 ... 10	0	0	0	0	hours
DAO	Temperature alarm exclusion time after defrost	0 ... 999	0	0	0	0	min

PAR.	DESCRIPTION	RANGE	App1	App2	App3	App4	M.U.
OA0	Alarm signalling delay after disabling of digital input	0 ... 10	0	0	0	0	hours
td0	Delay in door open alarm activation	0 ... 250	0	0	0	0	min
tAO	Time delay for temperature alarm indication	0 ... 250	0	0	0	0	min
dAt	Alarm signalling end of defrost due to timeout	n/y	n	n	n	n	flag
rLO	External alarm locks controllers. n = does not lock; y = locks	n/y	n	n	n	n	flag
SA3	Probe 3 alarm Setpoint	-58,0...+302	0,0	0,0	0,0	0,0	°C/°F
dA3	Probe 3 alarm differential	1,0 ... 50,0	1,0	1,0	1,0	1,0	°C/°F
LIGHTS & DIGITAL INPUTS ("Lit" folder)							
dOd	Digital input for switching off utilities. 0 =disabled; 1 =disables fans; 2 =disables the compressor; 3 =disables fans and compressor	0/1/2/3	0	0	2	0	num
dAd	Activation delay for digital input	0 ... 255	0	0	0	0	min
dCO	Compressor deactivation delay after door opened	0 ... 255	1	1	1	1	min
PRESSURE SWITCH ("PrE" folder)							
Pen	Number of errors allowed per maximum/minimum pressure switch input	0 ... 15	0	0	0	0	num
PEI	Minimum/maximum pressure switch error count interval	1 ... 99	1	1	1	1	min
PEt	Delay in activating compressor after pressure switch deactivation	0 ... 255	0	0	0	0	min
COMMUNICATION ("Add" folder)							
PtS	Communication protocol selection. t = Televis; d = Modbus	t/d	t	t	t	t	flag
dEA	Index of the device inside the family (valid values from 0 to 14)	0 ... 14	0	0	0	0	num
FAA	Device family - valid values from 0 to 14	0 ... 14	0	0	0	0	num
Pty	Modbus parity bit. n = none; E = even; o = odd	n/E/o	n	n	n	n	num
StP	Modbus stop bit	1b/2b	1b	1b	1b	1b	flag
DISPLAY ("diS" folder)							
LOC	Basic commands modification lock. It is still possible to enter parameter programming mode and modify them. y = yes; n = no	n/y	n	n	n	n	flag
PS1	PAssword1: if PS1≠0 is the access key to User parameters	0 ... 250	0	0	0	0	num
PS2	PAssword2: if PS2≠0 is the access key to Installer parameters	0 ... 250	15	15	15	15	num
ndt	Display with decimal point. y = yes; n = no	n/y	y	y	y	y	flag
CA1	Calibration 1. Temperature value to be added to the Pb1 value	-12,0...+12,0	0,0	0,0	0,0	0,0	°C/°F

PAR.	DESCRIPTION	RANGE	App1	App2	App3	App4	M.U.
CA2	Calibration 2. Temperature value to be added to the Pb2 value	-12,0...+12,0	0,0	0,0	0,0	0,0	°C/°F
CA3	Calibration 3. Temperature value to be added to the Pb3 value	-12,0...+12,0	0,0	0,0	0,0	0,0	°C/°F
ddl	Display mode during defrost. 0 = display the temperature recorded by Pb1; 1 = lock recorded value of Pb1 at defrost start; 2 = display the "dEF" label	0/1/2	0	0	0	0	num
Ldd	Timeout value for display unlock - dEF label	0 ... 255	30	30	30	30	min
dro	Select the unit of measurement used when displaying the temperature recorded by the probes. (0 = °C, 1 = °F). NOTE: switching between °C and °F or vice-versa DOES NOT modify the Set, dif values, etc. (e.g. Setpoint=10°C becomes 10°F)	0/1	0	0	0	0	flag
ddd	Selects the type of value to display. 0 = Setpoint; 1 = probe Pb1; 2 = probe Pb2; 3 = probe Pb3	0/1/2/3	1	1	1	1	num
HACCP ("HCP" folder)							
SHH	Maximum HACCP alarm signals threshold	-55,0...150	0	0	0	0	°C/°F
SLH	Minimum HACCP alarm signals threshold	-55,0...150	0	0	0	0	°C/°F
drA	Minimum time spent in critical range for the event to be recorded. After this a HACCP alarm will be triggered and logged	0 ... 99	0	0	0	0	min
drH	HACCP alarm reset time after last reset	0 ... 250	0	0	0	0	hours
H50	Enable HACCP and alarm relay functions. 0 = HACCP alarms NOT enabled; 1 = HACCP alarms enabled and alarm relay NOT enabled; 2 = HACCP alarms enabled and alarm relay enabled	0/1/2	0	0	0	0	num
H51	HACCP alarm exclusion time	0 ... 250	0	0	0	0	min
CONFIGURATION ("CnF" folder)							
H00	Probe type selection. 0 = PTC; 1 = NTC; 2 = PT1000	0/1/2	1	1	1	1	num
H11	Configuration of digital input 1/polarity. 0 = disabled; ±1 = defrost; ±2 = economy Setpoint; ±3 = AUX; ±4 = door switch; ±5 = external alarm; ±6 = Standby; ±7 = pressure switch; ±8 = Deep Cooling; ±9 = disable HACCP alarm logging. NOTE: • the "+" sign indicates that the input is active if the contact is closed. • the "-" sign indicates that the input is active if the contact is open.	-9 ... +9	2	2	4	2	num
H12	Configuration of digital input 2/polarity. Same as H11	-9 ... +9	0	0	0	0	num

PAR.	DESCRIPTION	RANGE	App1	App2	App3	App4	M.U.
H21	Configurability of digital output 1 (※). 0 = disabled; 1 = compressor; 2 = defrost; 3 = fans; 4 = alarm; 5 = AUX; 6 = Standby	0 ... 6	1	1	1	1	num
H22	Configurability of digital output 2 (※). Same as H21.	0 ... 6	2	2	3	4	num
H25	Enable/Disable buzzer. 0 =Disabled; 4 =Enabled; 1-2-3-5-6-7-8 =not used	0 ... 8	0	0	0	4	num
H31	Configurability of UP key. 0 = disabled; 1 = defrost; 2 = AUX; 3 = economy Setpoint; 4 = Standby; 5 = reset HACCP alarms; 6 = disable HACCP alarms; 7 = Deep Cooling.	0 ... 7	1	1	1	1	num
H32	Configurability of DOWN key. Same as H31	0 ... 7	0	0	0	0	num
H42	Evaporator probe present. n = not present; y = present	n/y	y	n	y	n	flag
H43	Probe 3 present. n = not present; y = present	n/y	n	n	n	n	flag
reL	Device version. Read-only parameter	/	/	/	/	/	/
tAb	tAble of parameters. Reserved: read-only parameter	/	/	/	/	/	/
COPY CARD ("FPr" folder)							
UL	Programming parameter transfer from instrument to Copy Card	/	/	/	/	/	/
Fr	Format Copy Card. Erase all data contained in the Copy Card. NOTE: If parameter "Fr" is used, the data entered will be permanently lost. This operation cannot be cancelled.	/	/	/	/	/	/
FUNCTIONS ("FnC" folder)							
rAP	Reset pressure switch alarms	/	/	/	/	/	/
rES	Reset HACCP alarms	/	/	/	/	/	/

NOTE: If one or more parameters marked with (!) are modified, the controller MUST be switched off and then switched on again to ensure correct operation.

DESCRIPTION OF IDPLUS 974 FAMILY

IDPlus 974 devices are controllers with 3 relay outputs, 2 temperature sensors (regulation and evaporator), a multifunctional Digital/Temperature input and a digital input.

Relay outputs 2 and 3 can be used to control:

- compressor
- defrost heating elements
- evaporator fans
- AUX output
- alarm
- Standby

The second probe can be used to control the defrost cycle and the evaporator fans.

The Digital inputs (D.I.1 and D.I.2) can be used for:

- Energy Saving
- Defrost activation
- AUX management
- door switch
- Standby
- external alarm
- Deep Cooling
- pressure switch
- HACCP alarms

TABLE OF USER MENU PARAMETERS (IDPLUS 974)

PAR.	DESCRIPTION	RANGE	APP1	APP2	APP3	APP4	M.U.
SEt	Temperature control SEtpoint	LSE ... HSE	0.0	0.0	0.0	0.0	°C/°F
diF	Compressor relay activation differential	0.1 ... 30.0	2.0	2.0	2.0	2.0	°C/°F
HSE	Maximum value that can be assigned to the Setpoint	LSE ... 302	99.0	99.0	99.0	99.0	°C/°F
LSE	Minimum value that can be assigned to the Setpoint	-58.0 ... HSE	-50.0	-50.0	-50.0	-50.0	°C/°F
dtY	Type of defrost	0/1/2	0	0		1	num
dIt	Interval between the start of two consecutive defrost cycles	0 ... 250	6	6	6	6	hours
dEt	Defrost timeout	1 ... 250	30	30	30	30	min
dSt	End defrost temperature	-50.0 ... 150	8.0	8.0	8.0	8.0	°C/°F
FSt	Fans stop temperature	-58.0 ... 302	50.0	50.0	50.0	50.0	°C/°F
Fdt	Fan activation delay after a defrost cycle	0 ... 250	0	0	0	0	min
dt	Coil drainage time	0 ... 250	0	0	0	0	min
dFd	To select or exclude the fans	n/y	y	y	y	y	min
HAL	Maximum temperature alarm	LAL ... 150	50.0	50.0	50.0	50.0	°C/°F
LAL	Minimum temperature alarm	-50.0 ... HAL	-50.0	-50.0	-50.0	-50.0	°C/°F
LOC	Basic commands modification lock	n/y	n	n	n	n	flag
PS1	PAssword 1 for access to QUICK menu parameters	0 ... 250	0	0	0	0	num
CA1	Calibration1. Value to be added to the value read by probe 1	-12.0 ... 12.0	0.0	0.0	0.0	0.0	°C/°F
CA2	Calibration2. Value to be added to the value read by probe 2	-12.0 ... 12.0	0.0	0.0	0.0	0.0	°C/°F
CA3	Calibration3. Value to be added to the value read by probe 3	-12.0 ... 12.0	0.0	0.0		0.0	°C/°F
ddl	Display mode during defrost	0/1/2	0	0	0	0	num
Ldd	Display lock disabling timeout. 0 = function disabled	0 ... 255	30	30	30	30	min
SHH	Maximum HACCP alarm signals threshold	-55.0 ... 150		10.0			°C/°F
SLH	Minimum HACCP alarm signals threshold	-55.0 ... 150		-10.0			°C/°F
drA	Minimum time spent in critical range before alarm occurs	0 ... 99		10			min
drH	HACCP alarm reset time after last reset	0 ... 250		24			hours
H50	enable HACCP and alarm relay functions	0/1/2		1			num
H51	HACCP alarm exclusion time	0 ... 250		0			min
H42	Evaporator probe present. n = not present; y = present	n/y	y	y	y	y	flag
H43	Probe 3 present. n = not present; y = present	n/y	n	y	n	n	flag
rEL	firmware rELease. Reserved: read-only parameter	/	/	/	/	/	/
tAb	Table of parameters. Reserved: read-only parameter	/	/	/	/	/	/

Notes: * The USER menu parameters also include: **PA2**, which can be used to access the Installer menu

** To reset the HACCP alarms, use the rES function in the FnC folder for Installer parameters

*** For the complete list of parameters, see: APPENDIX A: **Table of** Installer menu parameters

TABLE OF INSTALLER MENU PARAMETERS (IDPLUS 974)

PAR.	DESCRIPTION	RANGE	APP1	APP2	APP3	APP4	M.U.
SEt	Temperature control SEtpoint	LSE ... HSE	0,0	0,0	0,0	0,0	°C/°F
COMPRESSOR ("CP" folder)							
diF	diFferential. Compressor relay activation differential	0,1...30,0	2,0	2,0	2,0	2,0	°C/°F
HSE	Higher SEt. Maximum value that can be assigned to the Setpoint	LSE...302	99,0	99,0	99,0	99,0	°C/°F
LSE	Lower SEt. Minimum value that can be assigned to the Setpoint	-58,0...HSE	-50,0	-50,0	-50,0	-50,0	°C/°F
OSP	Temperature value to be added to the Setpoint if reduced set enabled (Economy function)	-30,0...30,0	3,0	0,0	0,0	3,0	°C/°F
Hc	Control mode. "H" = Hot, "C" = Cold	C/H	C	C	C	C	flag
Ont	Controller on time for faulty probe. If Ont = 1 and OFt = 0 , the compressor remains on; if Ont=1 and OFt>0 it runs in duty cycle mode	0 ... 250	0	0	0	0	min
OFt	Controller off time for faulty probe. If OFt = 1 and Ont = 0 , the controller remains off; if OFt = 1 and Ont>0 , it operates in duty cycle mode	0 ... 250	1	1	1	1	min
dOn	Compressor relay activation delay after request	0 ... 250	0	0	0	0	secs
dOF	Delay after switching off and subsequent activation	0 ... 250	0	0	0	0	min
dbi	Delay between two consecutive compressor activations	0 ... 250	0	0	0	0	min
OdO (!)	Delay in activating outputs after the instrument is switched on or after a power failure. 0 = not active	0 ... 250	0	0	0	0	min
dcS	Deep Cooling cycle Setpoint	-58,0...302	0,0	0,0	0,0	0,0	°C/°F
tdc	Deep Cooling cycle duration	0 ... 255	0	0	0	0	min*10
dcc	Defrost activation delay after a Deep Cooling cycle	0 ... 255	0	0	0	0	min
DEFROST ("DEF" folder)							
dtY	Type of defrost. 0 = electrical defrost; 1 = reverse cycle defrost; 2 = defrost independent of compressor	0/1/2	0	0	0	1	num
dit	Interval between the start of two consecutive defrost cycles	0 ... 250	6	6	6	6	hours

PAR.	DESCRIPTION	RANGE	APP1	APP2	APP3	APP4	M.U.
dCt	Selection of count mode for the defrost interval. 0 = compressor running time; 1 = appliance running time; 2 = A defrost cycle is run at each compressor stop	0/1/2	1	1	1	1	num
dOH	Delay for start of first defrost after request	0 ... 59	0	0	0	0	min
dEt	Defrost timeout; determines the maximum defrost duration	1 ... 250	30	30	30	30	min
dSt	Defrost end temperature - determined by probe Pb2	-50,0...150	8,0	8,0	8,0	50,0	°C/°F
dPO	Determines whether the instrument must enter defrost mode at start-up	n/y	n	n	n	n	flag
FANS ("FAn" folder)							
FSt	Fans stop temperature	-58,0...302	50,0	50,0	50,0	50,0	°C/°F
FAd	Fan activation differential	1,0 ... 50,0	2,0	2,0	2,0	2,0	°C/°F
Fdt	Fan activation delay after a defrost cycle	0 ... 250	0	0	0	0	min
dt	Coil drainage time	0 ... 250	0	0	0	0	min
dFd	Allows evaporator fan exclusion to be selected or not selected during defrosting. y = yes (fans excluded); n = no	n/y	y	y	y	y	flag
FCO	Selects or deselects fan deactivation at compressor OFF. 0 = fans off; 1 = fans active; 2 = duty cycle	0/1/2	0	0	0	0	num
FOn	Fans ON time in day duty cycle	0 ... 99	0	0	0	0	min
FOF	Fans OFF time in day duty cycle	0 ... 99	0	0	0	0	min
Fnn	Fans ON time in night duty cycle	0 ... 99	0	0	0	0	min
FnF	Fans OFF time in night duty cycle	0 ... 99	0	0	0	0	min
ESF	Night mode activation. n = no; y = yes	n/y	n	n	n	n	flag
ALARMS ("AL" folder)							
Att	Can be used to select absolute (Att=0) or relative (Att=1) values for HAL and LAL parameters	0/1	0	0	0	0	num
Afd	Alarm differential	1,0 ... 50,0	2,0	2,0	2,0	2,0	°C/°F
HAL	Maximum temperature alarm	LAL...302	50,0	50,0	50,0	50,0	°C/°F
LAL	Minimum temperature alarm	-58,0...HAL	-50,0	-50,0	-50,0	-50,0	°C/°F
PAO	Alarm exclusion time after re-activation following a power failure	0 ... 10	0	0	0	0	hours
dAO	Temperature alarm exclusion time after defrost	0 ... 999	0	0	0	0	min

PAR.	DESCRIPTION	RANGE	APP1	APP2	APP3	APP4	M.U.
OA0	Alarm signalling delay after disabling of digital input	0 ... 10	0	0	0	0	hours
td0	Delay in door open alarm activation	0 ... 250	0	0	0	0	min
tAO	Time delay for temperature alarm indication	0 ... 250	0	0	0	0	min
dAt	Alarm signalling end of defrost due to timeout	n/y	n	n	n	n	flag
rLO	External alarm locks controllers. n = does not lock; y = locks	n/y	n	n	n	n	flag
SA3	Probe 3 alarm Setpoint	-58,0...302	0,0	0,0	0,0	0,0	°C/°F
dA3	Probe 3 alarm differential	1,0 ... 50,0	1,0	1,0	1,0	1,0	°C/°F
LIGHTS & DIGITAL INPUTS ("Lit" folder)							
dOd	Digital input for switching off utilities. 0 =disabled; 1 =disables fans; 2 =disables the compressor; 3 =disables fans and compressor	0/1/2/3	0	0	0	0	num
dAd	Activation delay for digital input	0 ... 255	0	0	0	0	min
dCO	Compressor deactivation delay after door opened	0 ... 255	1	1	1	1	min
AuP	Aux output activation when door opened. n = not linked; y = linked	n/y	n	n	y	n	flag
PRESSURE SWITCH ("PrE" folder)							
Pen	Number of errors allowed per maximum/minimum pressure switch input	0 ... 15	0	0	0	0	num
PEI	Minimum/maximum pressure switch error count interval	1 ... 99	1	1	1	1	min
PEt	Delay in activating compressor after pressure switch deactivation	0 ... 255	0	0	0	0	min
COMMUNICATION ("Add" folder)							
PtS	Communication protocol selection. t = Televis; d = Modbus	t/d	t	t	t	t	flag
dEA	Index of the device inside the family (valid values from 0 to 14)	0 ... 14	0	0	0	0	num
FAA	Device family - valid values from 0 to 14	0 ... 14	0	0	0	0	num
Pty	Modbus parity bit. n = none; E = even; o = odd	n/E/o	n	n	n	n	num
StP	Modbus stop bit	1b/2b	1b	1b	1b	1b	flag
DISPLAY ("diS" folder)							
LOC	Basic commands modification lock. It is still possible to enter parameter programming mode and modify them. y = yes; n = no	n/y	n	n	n	n	flag
PS1	PAssword1: if PS1≠0 is the access key to User parameters	0 ... 250	0	0	0	0	num
PS2	PAssword2: if PS2≠0 is the access key to Installer parameters	0 ... 250	15	15	15	15	num
ndt	Display with decimal point. y = yes; n = no	n/y	y	y	y	y	flag

PAR.	DESCRIPTION	RANGE	APP1	APP2	APP3	APP4	M.U.
CA1	Calibration 1. Temperature value to be added to the Pb1 value	-12,0...+12,0	0,0	0,0	0,0	0,0	°C/°F
CA2	Calibration 2. Temperature value to be added to the Pb2 value	-12,0...+12,0	0,0	0,0	0,0	0,0	°C/°F
CA3	Calibration 3. Temperature value to be added to the Pb3 value	-12,0...+12,0	0,0	0,0	0,0	0,0	°C/°F
ddl	Display mode during defrost. 0 = display the temperature recorded by Pb1; 1 = lock recorded value of Pb1 at defrost start; 2 = display the "dEF" label	0/1/2	0	0	0	0	num
Ldd	Timeout value for display unlock - dEF label	0 ... 255	30	30	30	30	min
dro	Select the unit of measurement used when displaying the temperature recorded by the probes. (0 = °C, 1 = °F). NOTE: switching between °C and °F or vice-versa DOES NOT modify the Set, dif values, etc. (e.g. Setpoint=10°C becomes 10°F)	0/1	0	0	0	0	flag
ddd	Selects the type of value to display. 0 = Setpoint; 1 = probe Pb1; 2 = probe Pb2; 3 = probe Pb3.	0/1/2/3	1	1	1	1	num
HACCP ("HCP" folder)							
SHH	Maximum HACCP alarm signals threshold.	-55,0...150	0	10	0	0	°C/°F
SLH	Minimum HACCP alarm signals threshold.	-55,0...150	0	-10	0	0	°C/°F
drA	Minimum time spent in critical range for the event to be recorded. After this a HACCP alarm will be triggered and logged.	0 ... 99	0	10	0	0	min
drH	HACCP alarm reset time after last reset.	0 ... 250	0	24	0	0	hours
H50	Enable HACCP and alarm relay functions. 0 = HACCP alarms NOT enabled; 1 = HACCP alarms enabled and alarm relay NOT enabled; 2 = HACCP alarms enabled and alarm relay enabled.	0/1/2	0	1	0	0	num
H51	HACCP alarm exclusion time.	0 ... 250	0	0	0	0	min
CONFIGURATION ("CnF" folder)							
H00	Probe type selection. 0 = PTC; 1 = NTC; 2 = PT1000.	0/1/2	1	1	1	1	num
H11	Configuration of digital input 1/polarity. 0 = disabled; ±1 = defrost; ±2 = economy Setpoint; ±3 = AUX; ±4 = door switch; ±5 = external alarm; ±6 = Standby; ±7 = pressure switch; ±8 = Deep Cooling; ±9 = disable HACCP alarm logging. NOTE: • the "+" sign indicates that the input is active if the contact is closed. • the "-" sign indicates that the input is active if the contact is open.	-9 ... +9	2	0	4	2	num

PAR.	DESCRIPTION	RANGE	APP1	APP2	APP3	APP4	M.U.
H12	Configuration of digital input 2/polarity. Same as H11	-9 ... +9	0	0	0	0	num
H21	Configurability of digital output 1 (※). 0 = disabled; 1 = compressor; 2 = defrost; 3 = fans; 4 = alarm; 5 = AUX; 6 = Standby	0 ... 6	1	1	1	1	num
H22	Configurability of digital output 2 (※). Same as H21	0 ... 6	2	2	5	2	num
H23	Configurability of digital output 3 (※). Same as H21	0 ... 6	3	3	3	3	num
H25	Enable/Disable buzzer. 0 = Disabled; 4 = Enabled; 1-2-3-5-6-7-8 = not used	0 ... 8	0	0	0	0	num
H31	Configurability of UP key. 0 = disabled; 1 = defrost; 2 = AUX; 3 = economy Setpoint; 4 = Standby; 5 = reset HACCP alarms; 6 = disable HACCP alarms; 7 = Deep Cooling.	0 ... 7	1	1	1	1	num
H32	Configurability of DOWN key. Same as H31	0 ... 7	0	0	0	0	num
H42	Evaporator probe present. n = not present; y = present	n/y	y	y	y	y	flag
H43	Probe 3 present. n = not present; y = present	n/y	n	y	n	n	flag
rEL	Device version. Read-only parameter	/	/	/	/	/	/
tAb	Table of parameters. Reserved: read-only parameter	/	/	/	/	/	/
COPY CARD ("FPr" folder)							
UL	Programming parameter transfer from instrument to Copy Card	/	/	/	/	/	/
Fr	Format Copy Card. Erase all data contained in the Copy Card. NOTE: If parameter "Fr" is used, the data entered will be permanently lost. This operation cannot be cancelled.	/	/	/	/	/	/
FUNCTIONS ("FnC" folder)							
rAP	Reset pressure switch alarms	/	/	/	/	/	/
rES	Reset HACCP alarms	/	/	/	/	/	/

NOTE: If one or more parameters marked with (!) are modified, the controller MUST be switched off and then switched on again to ensure correct operation.

**Eliwell Controls s.r.l.**

Via dell'Industria, 15 • Z.I. Paludi
32010 Pieve d'Alpago (BL) ITALY

Telephone +39 0437 986 111

Fax +39 0437 989 066

www.eliwell.it

Technical Customer Support:

Technical helpline +39 0437 986 300

email: techsuppeliwell@invensys.com

Sales

Telephone: +39 0437 986 100 (Italy)

+39 0437 986 200 (other countries)

email: saleseliwell@invensys.com

code 9IS54157 - IDPlus 902/961/971/974 - EN - rel. 07/11

© **Eliwell Controls s.r.l. 2010-2011 All rights reserved.**



ISO 9001



i n v e n s y s
Controls